

FIG. 1

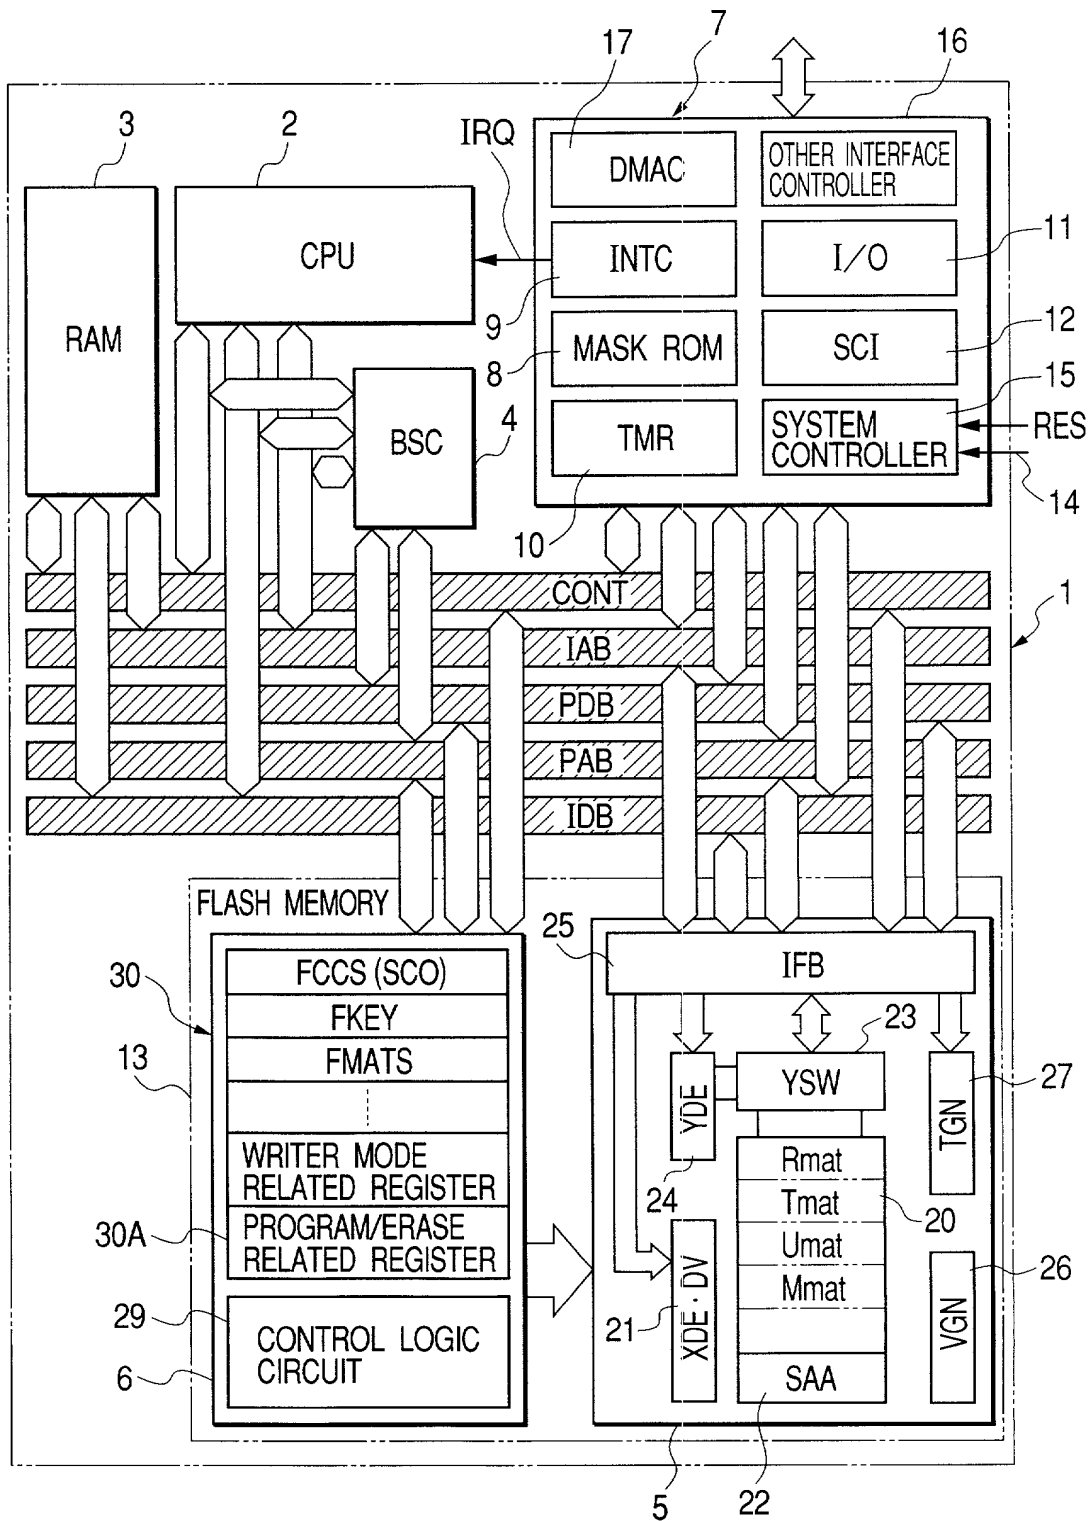


FIG. 2

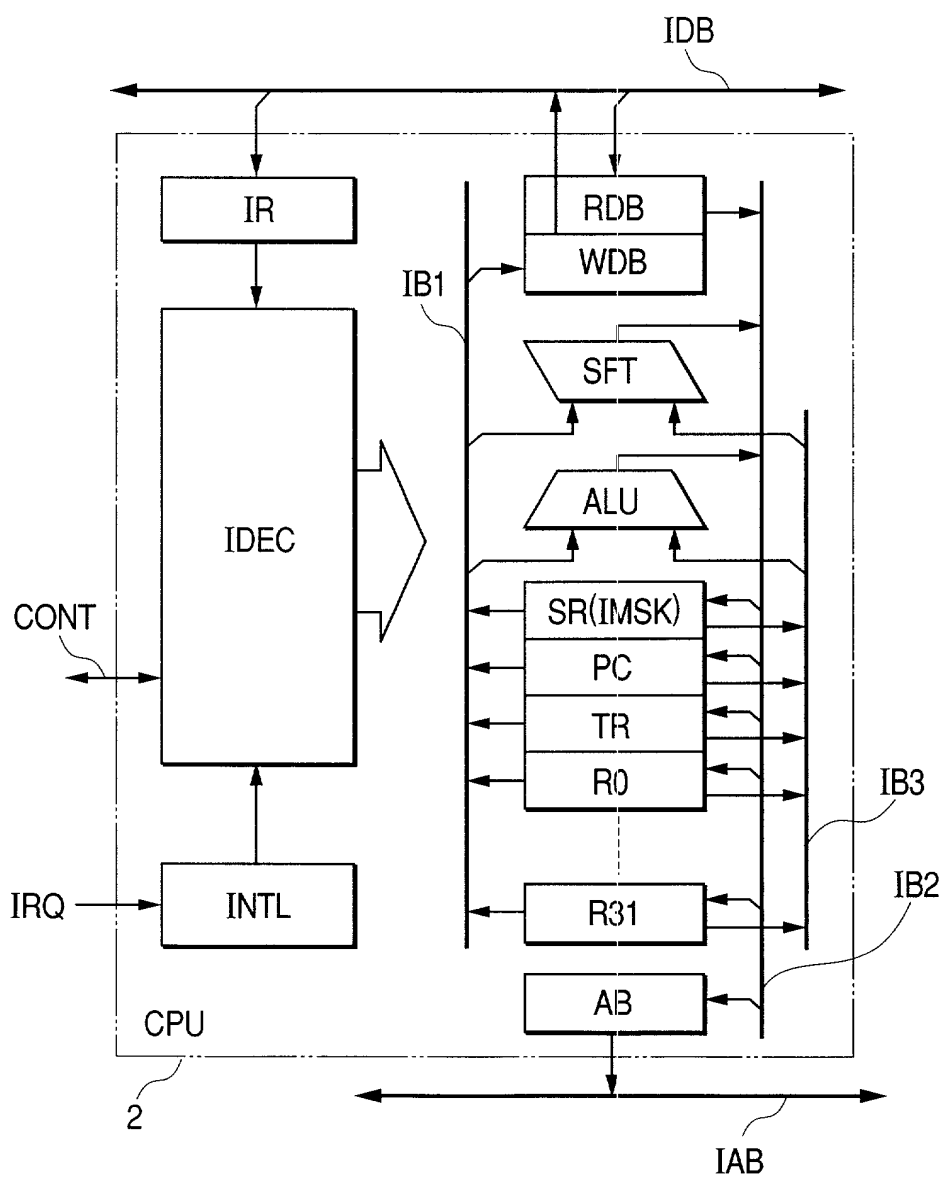


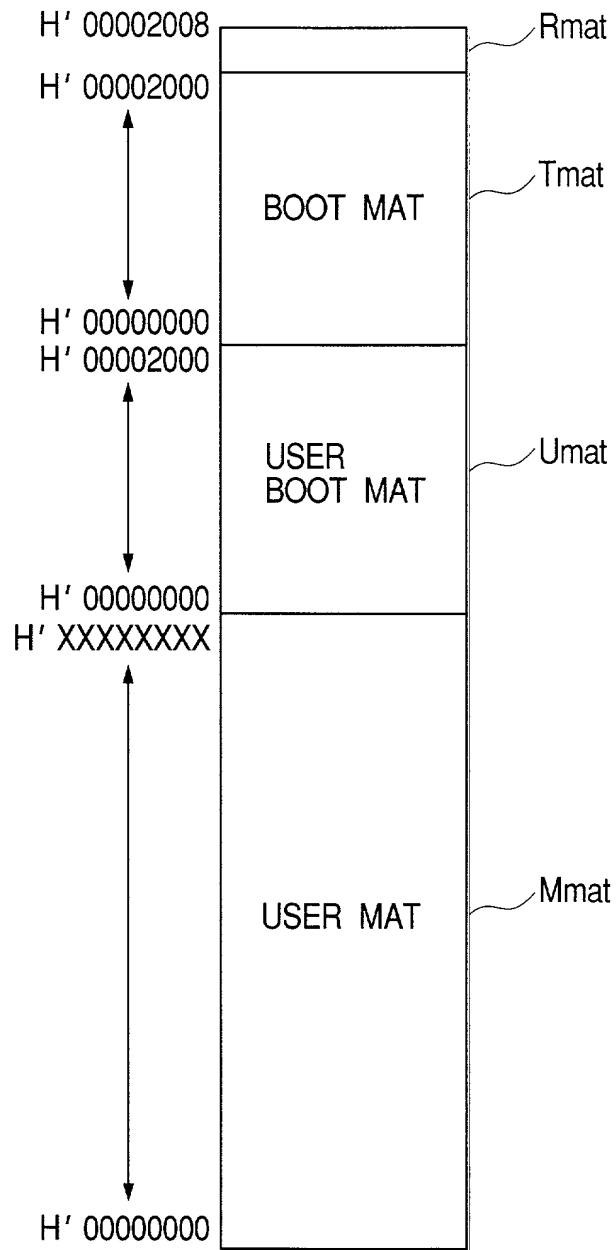
FIG. 3

FIG. 4(A)

OPERATION MODE MAT	BOOT MODE			WRITER MODE		
	ACCESS	PROGRAM	ERASE	ACCESS	PROGRAM	ERASE
USER MAT (Mmat)	○	○	○	○	○	○
USER BOOT MAT (Umat)	○	○	○	○	○	○
BOOT MAT (Tmat)	△	×	×	△	×	×
REPAIR & TRIMMING (Rmat)	×	×	×	×	×	×

FIG. 4(B)

OPERATION MODE MAT	USER BOOT MODE			USER MODE		
	ACCESS	PROGRAM	ERASE	ACCESS	PROGRAM	ERASE
USER MAT (Mmat)	○	○	○	○	○	○
USER BOOT MAT (Umat)	○	×	×	○	×	×
BOOT MAT (Tmat)	△	×	×	△	×	×
REPAIR & TRIMMING (Rmat)	×	×	×	×	×	×

FIG. 5

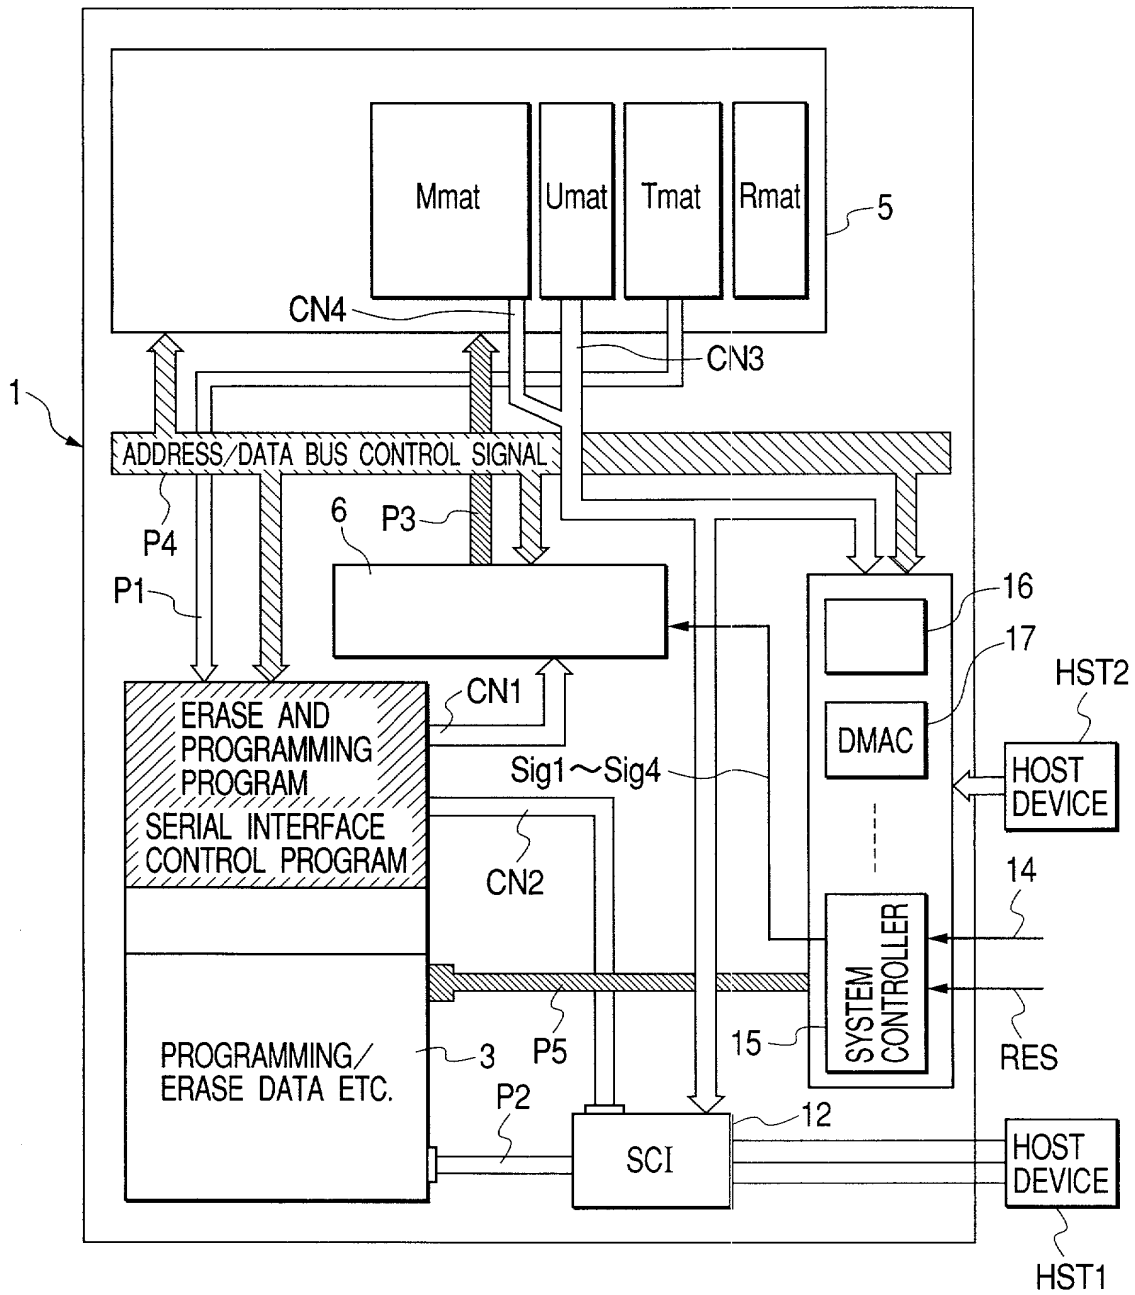


FIG. 6

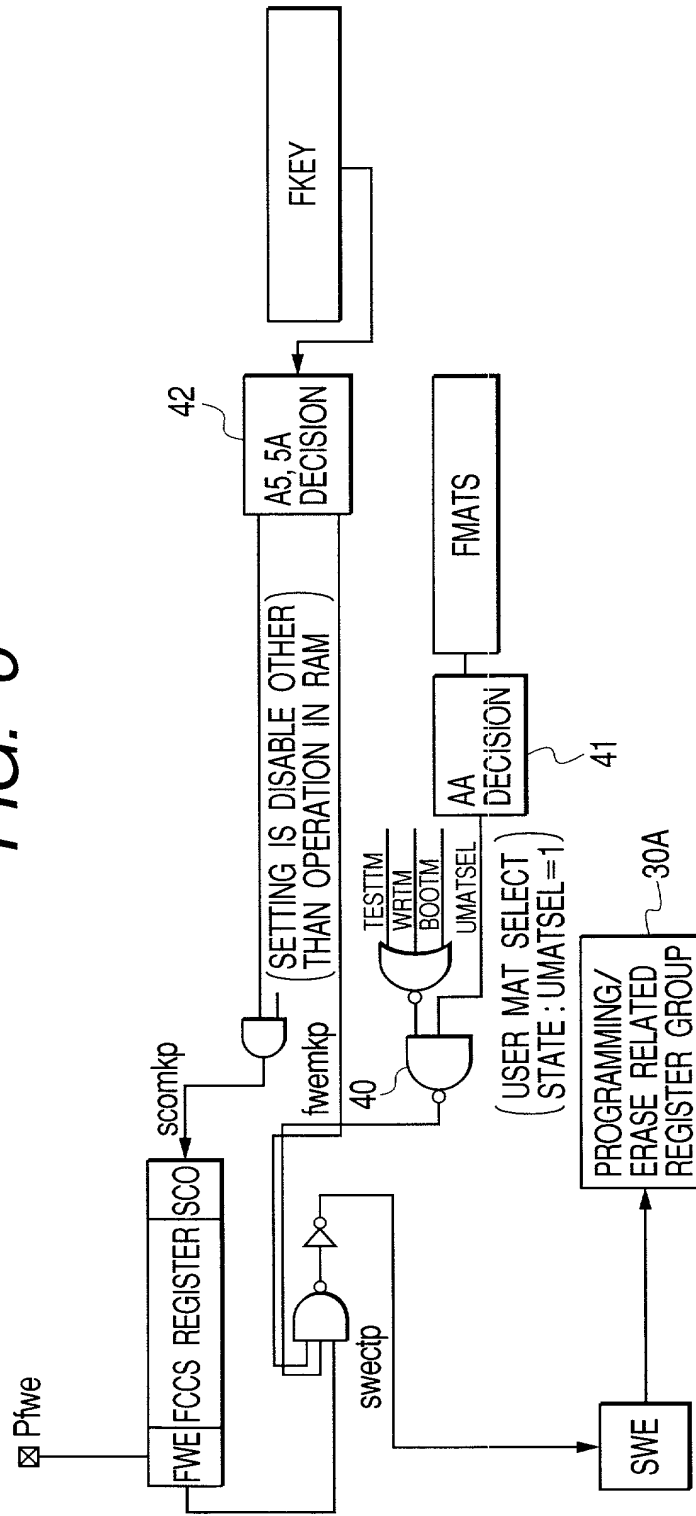


FIG. 7

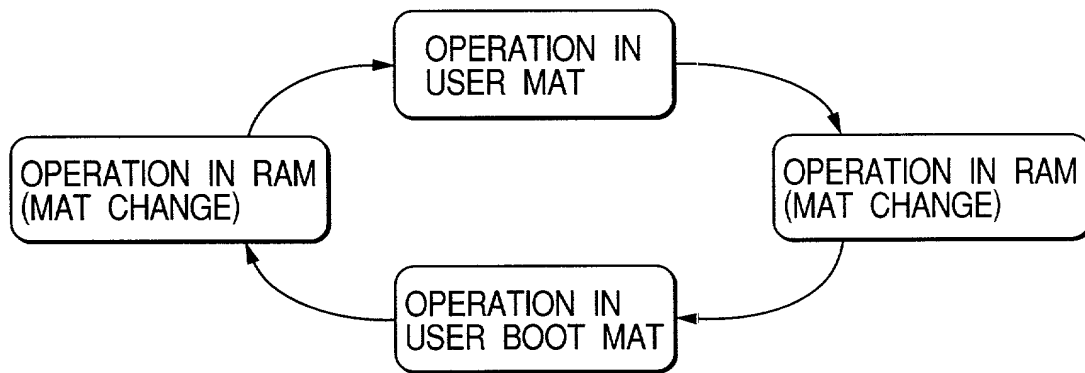


FIG. 8

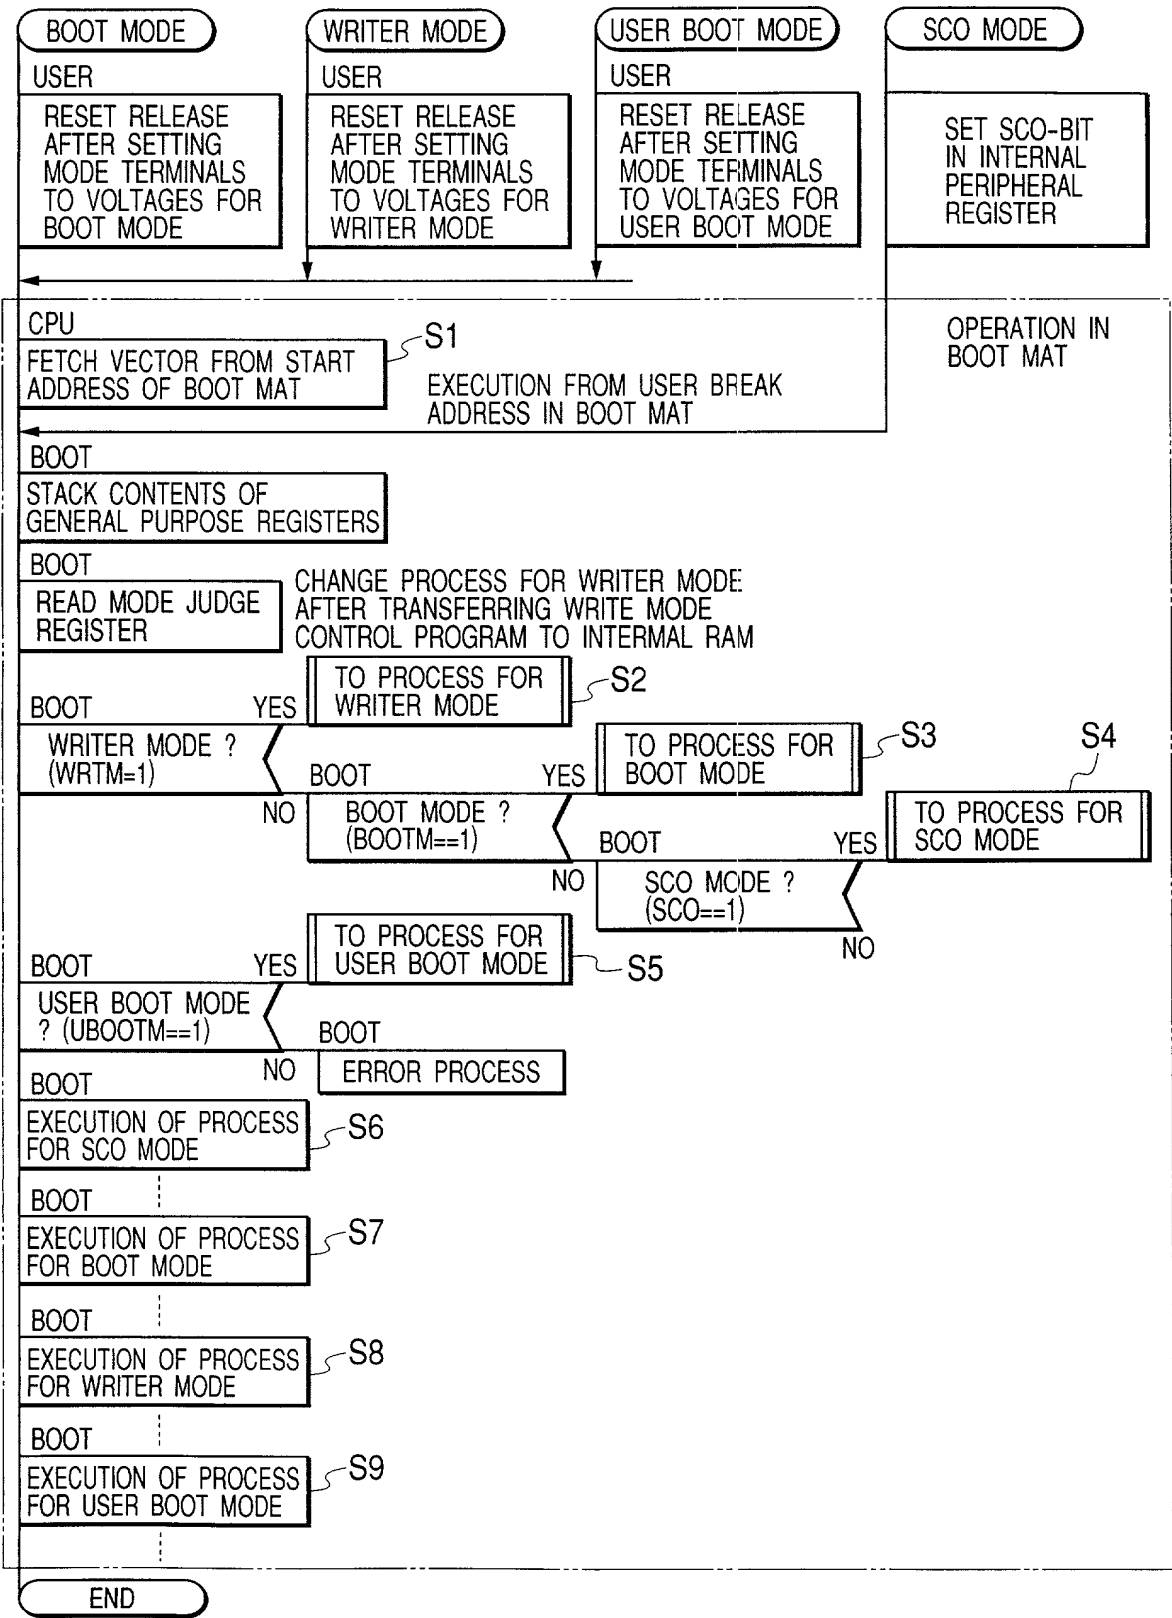


FIG. 9

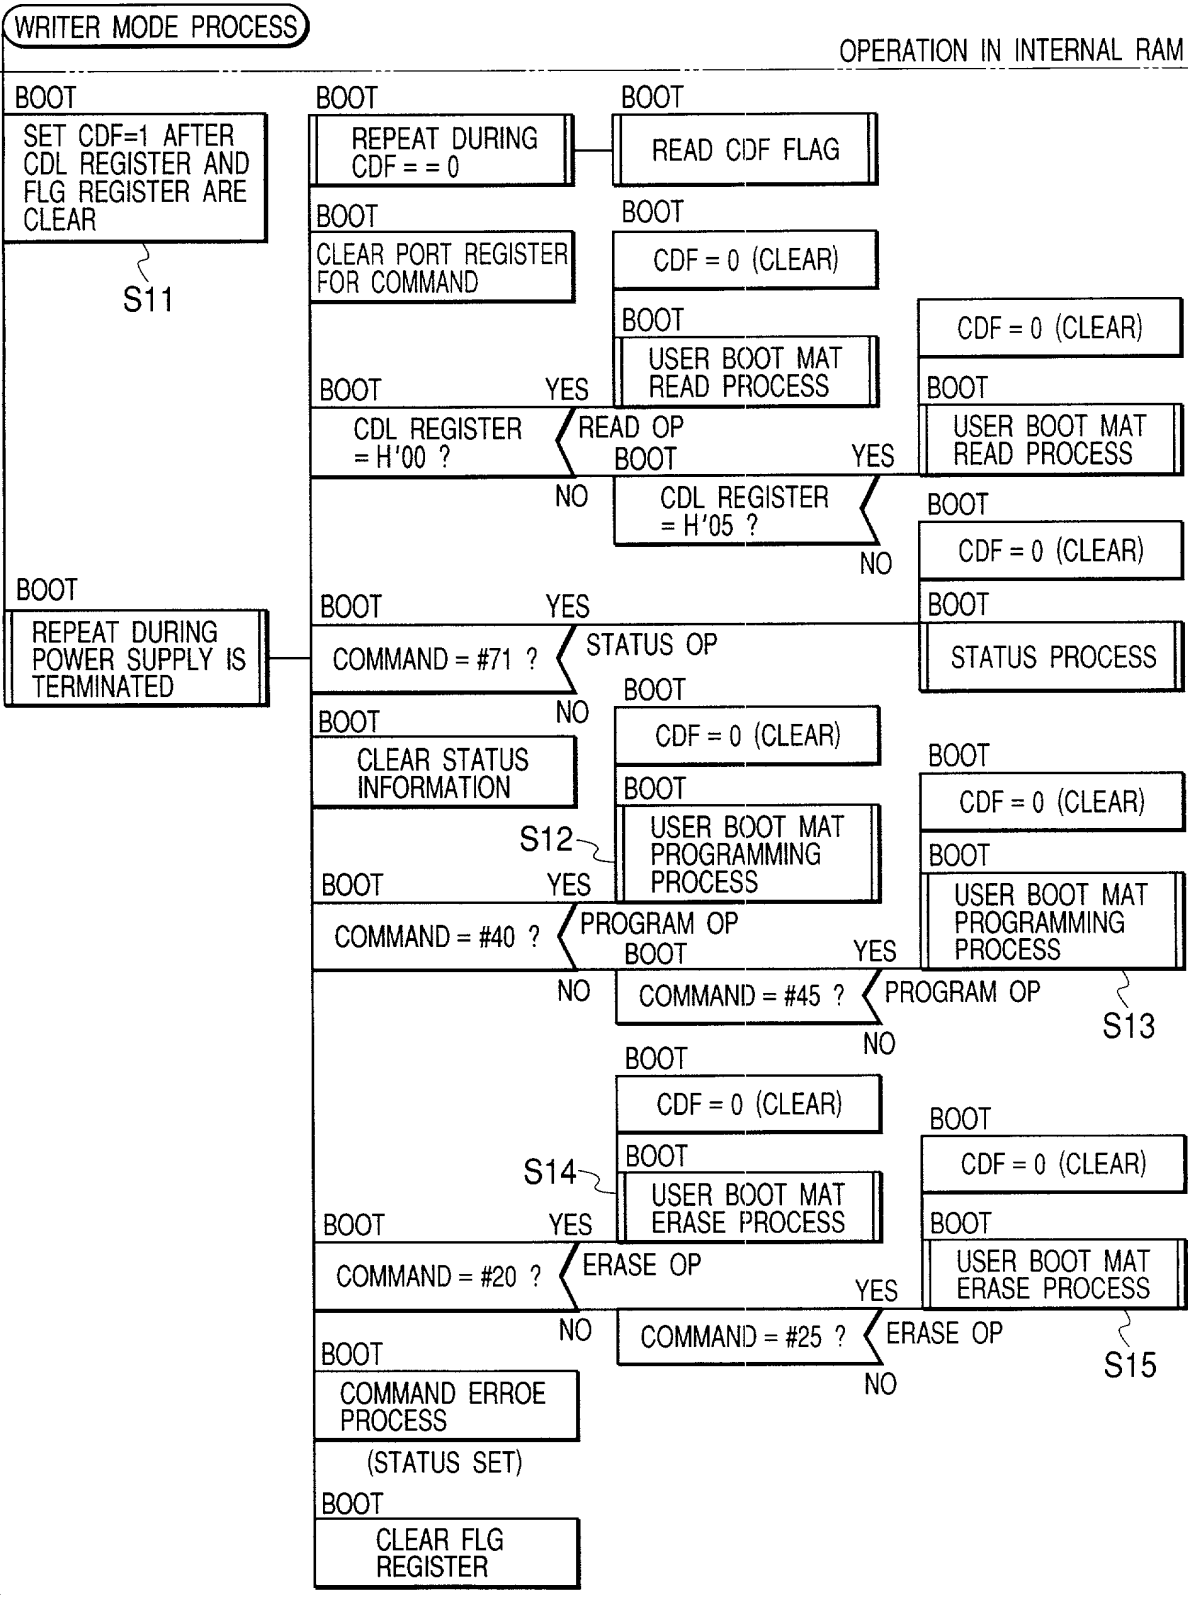


FIG. 10

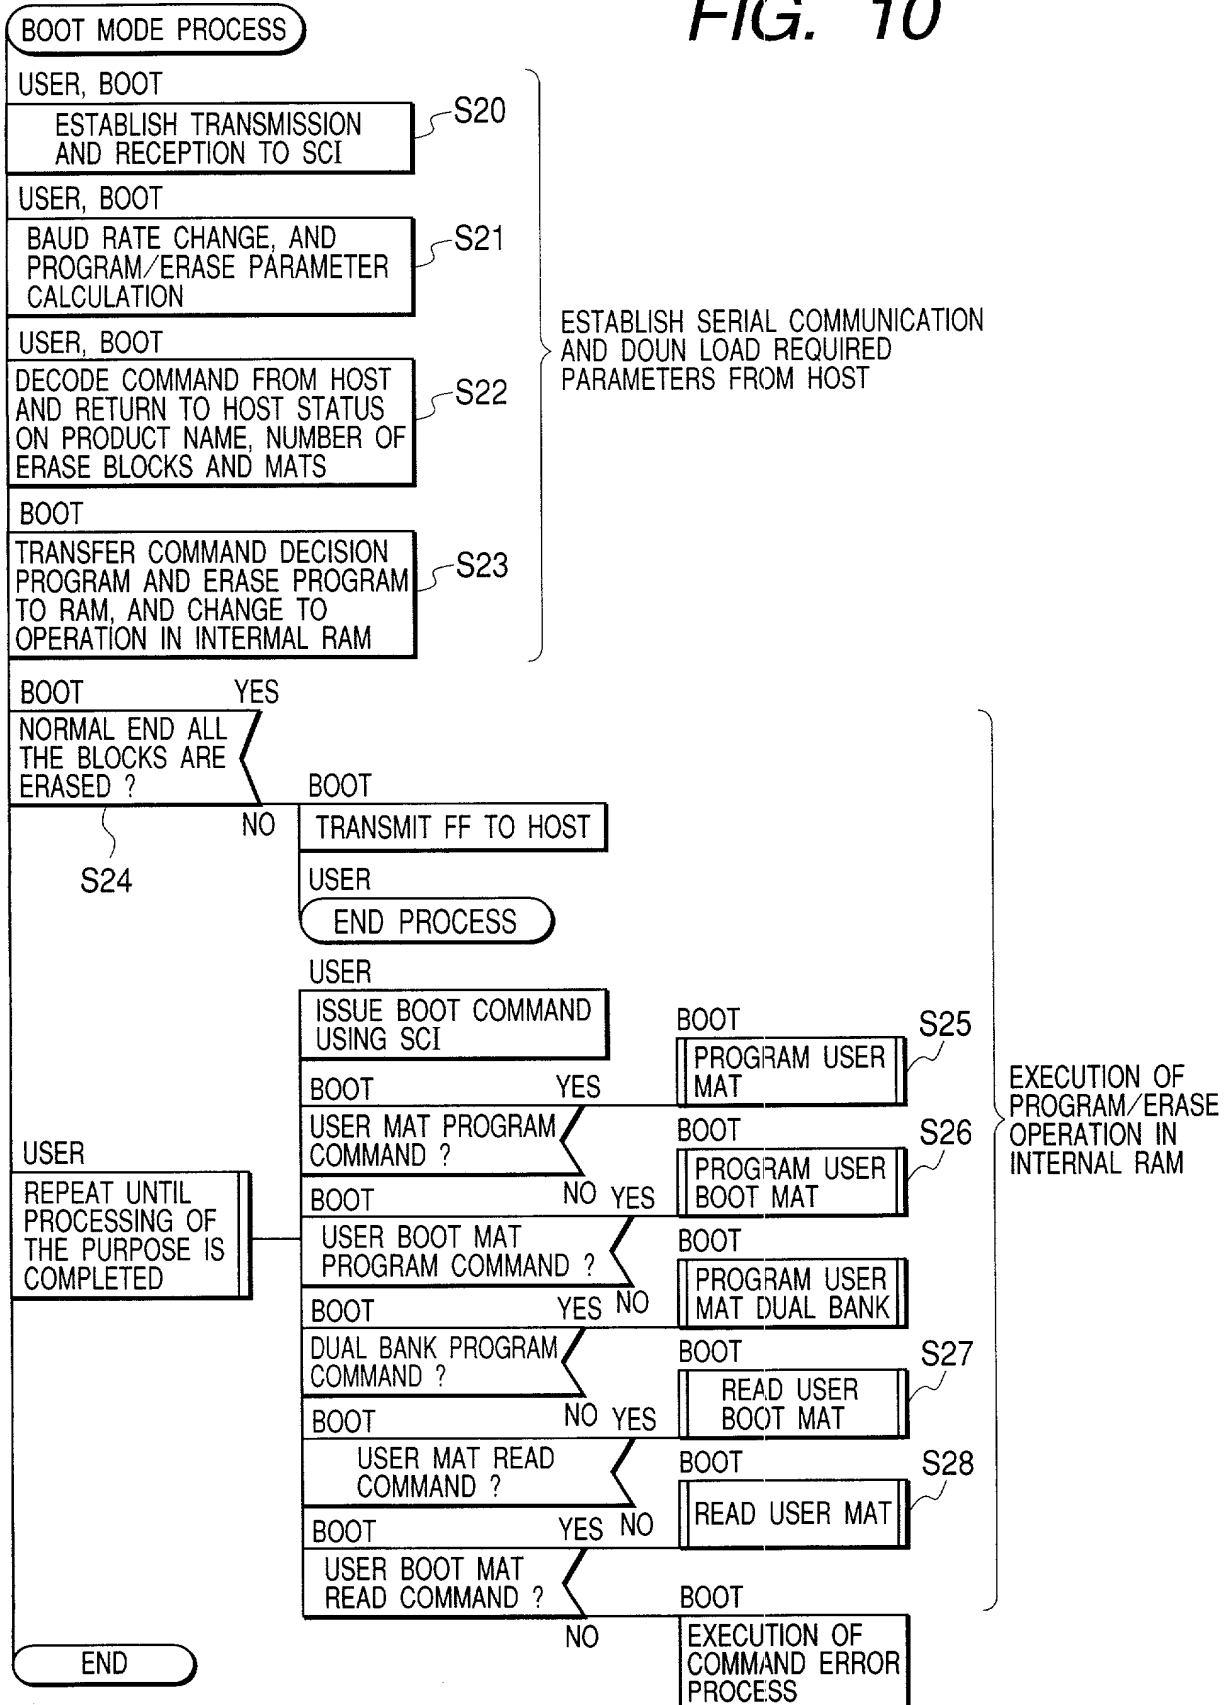


FIG. 11

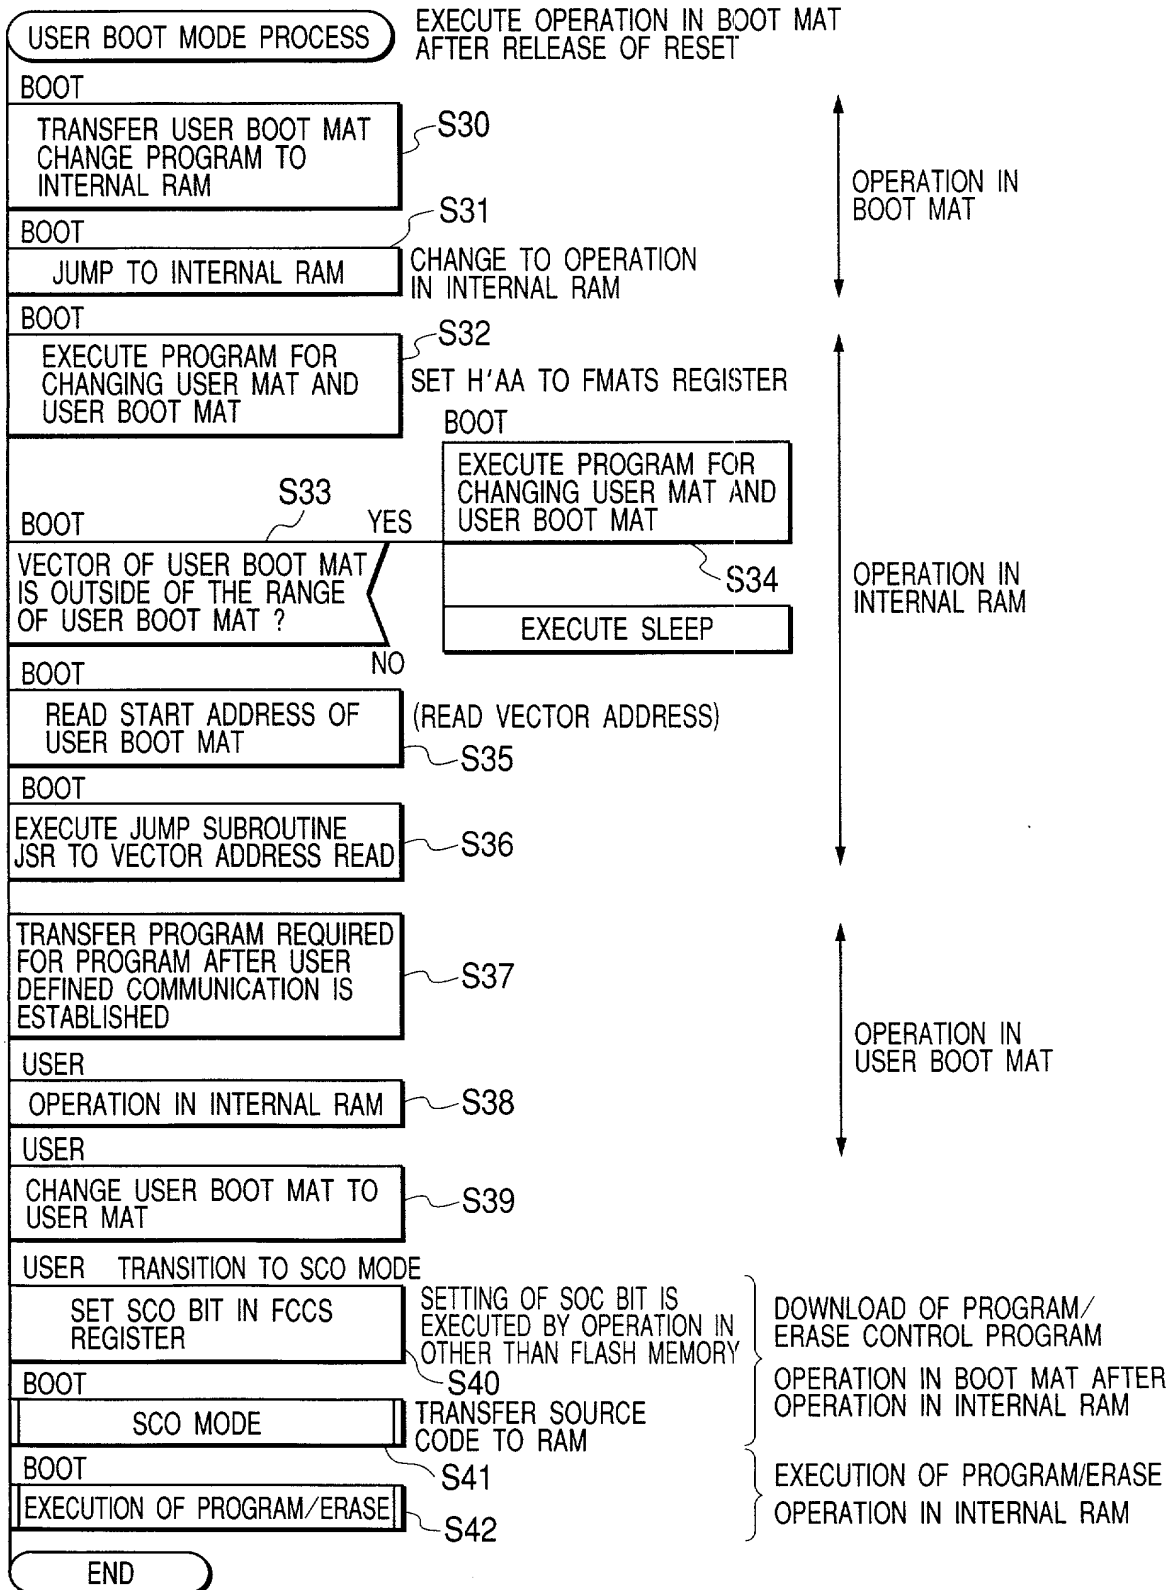


FIG. 12

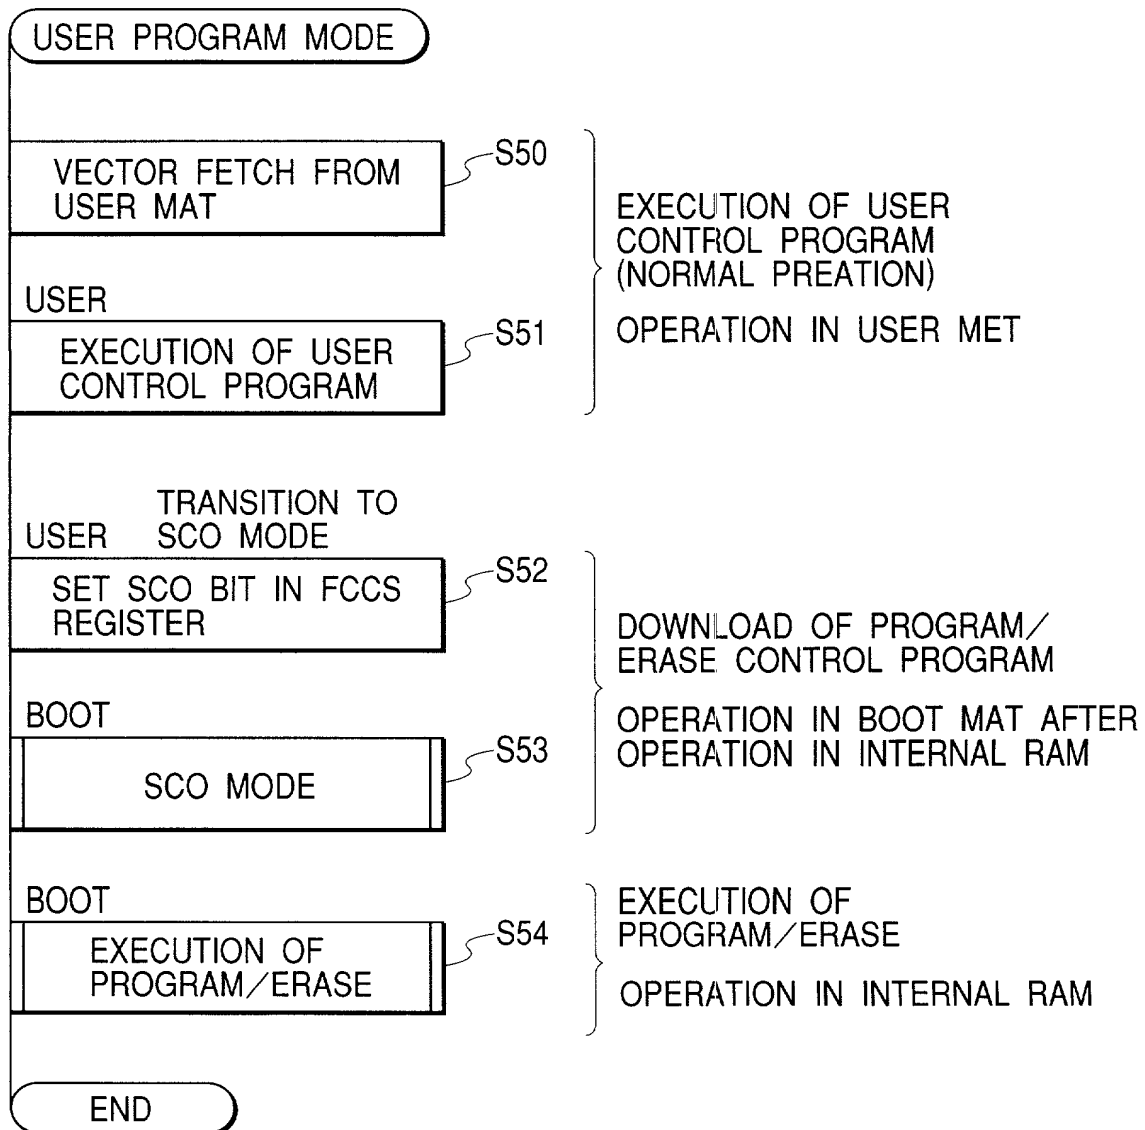


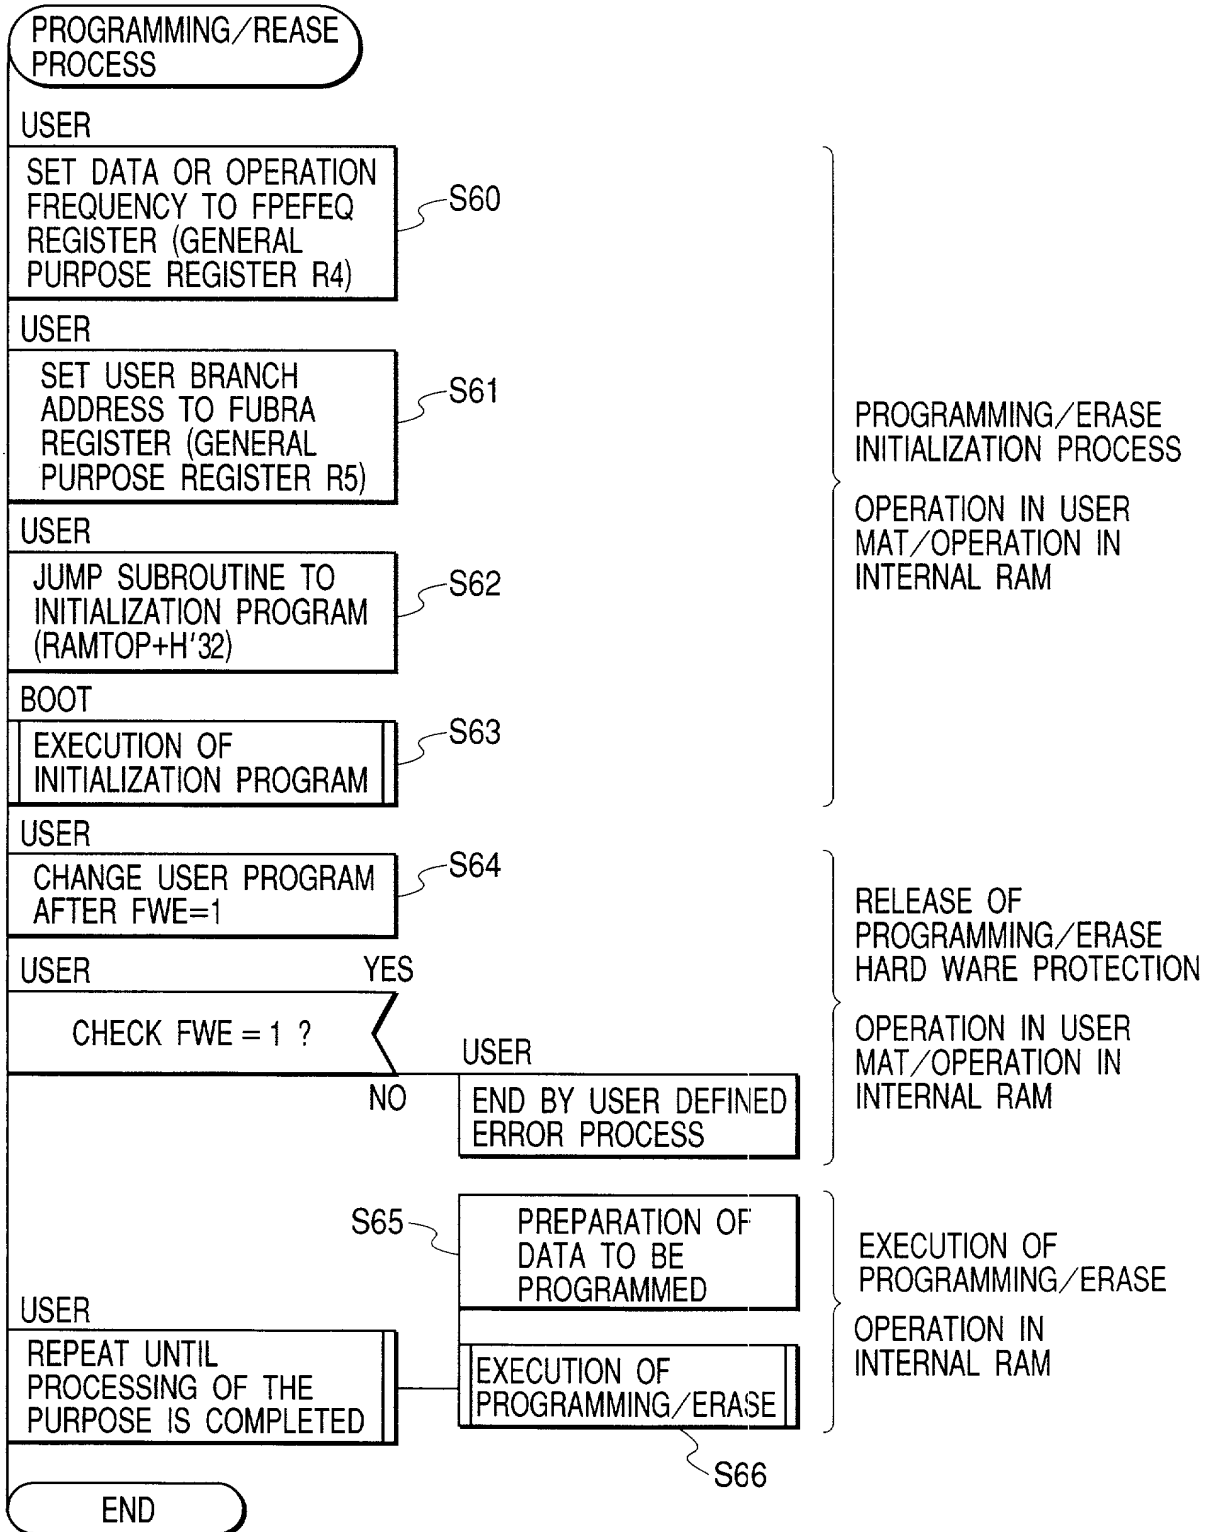
FIG. 13

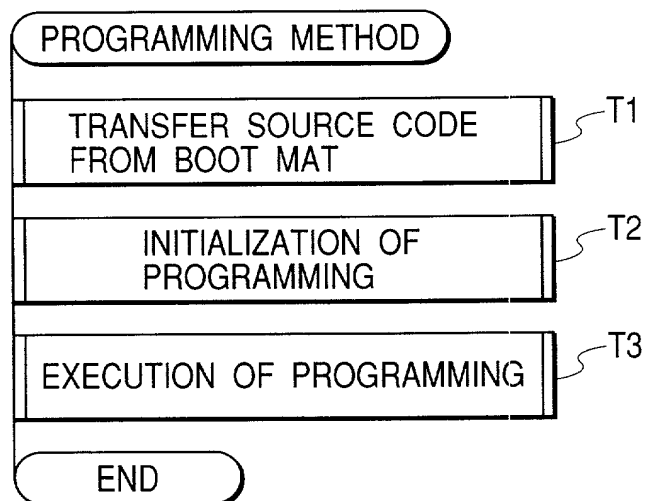
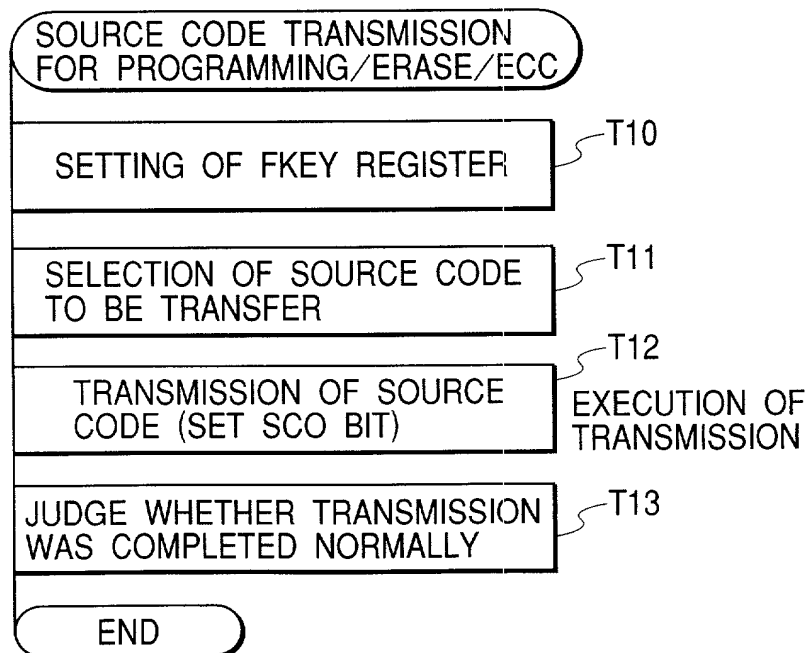
FIG. 14*FIG. 15*

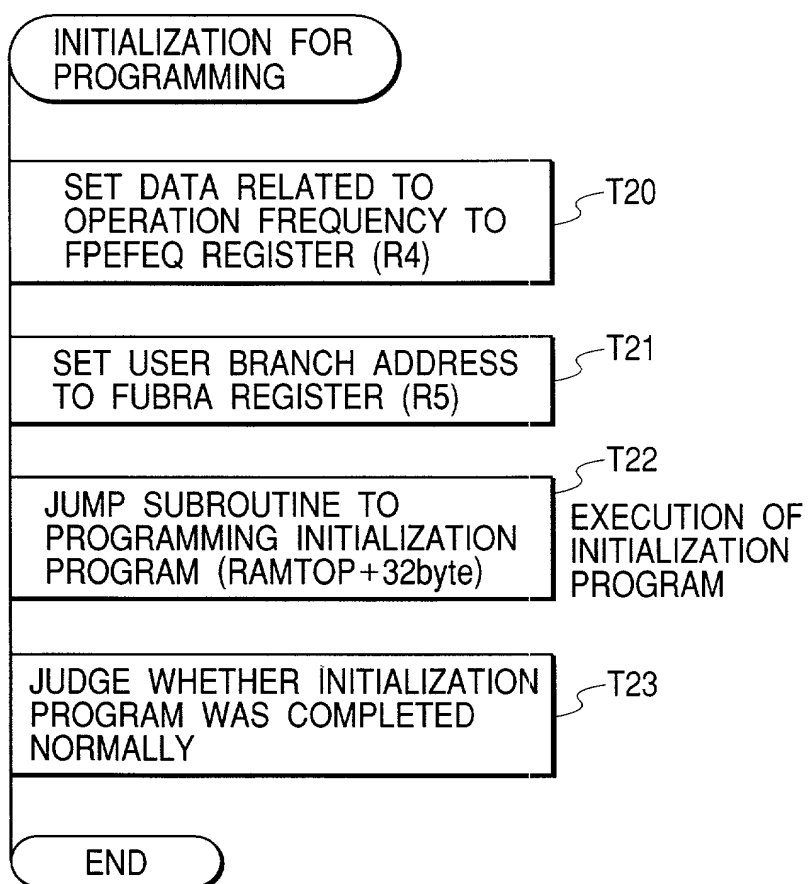
FIG. 16

FIG. 17

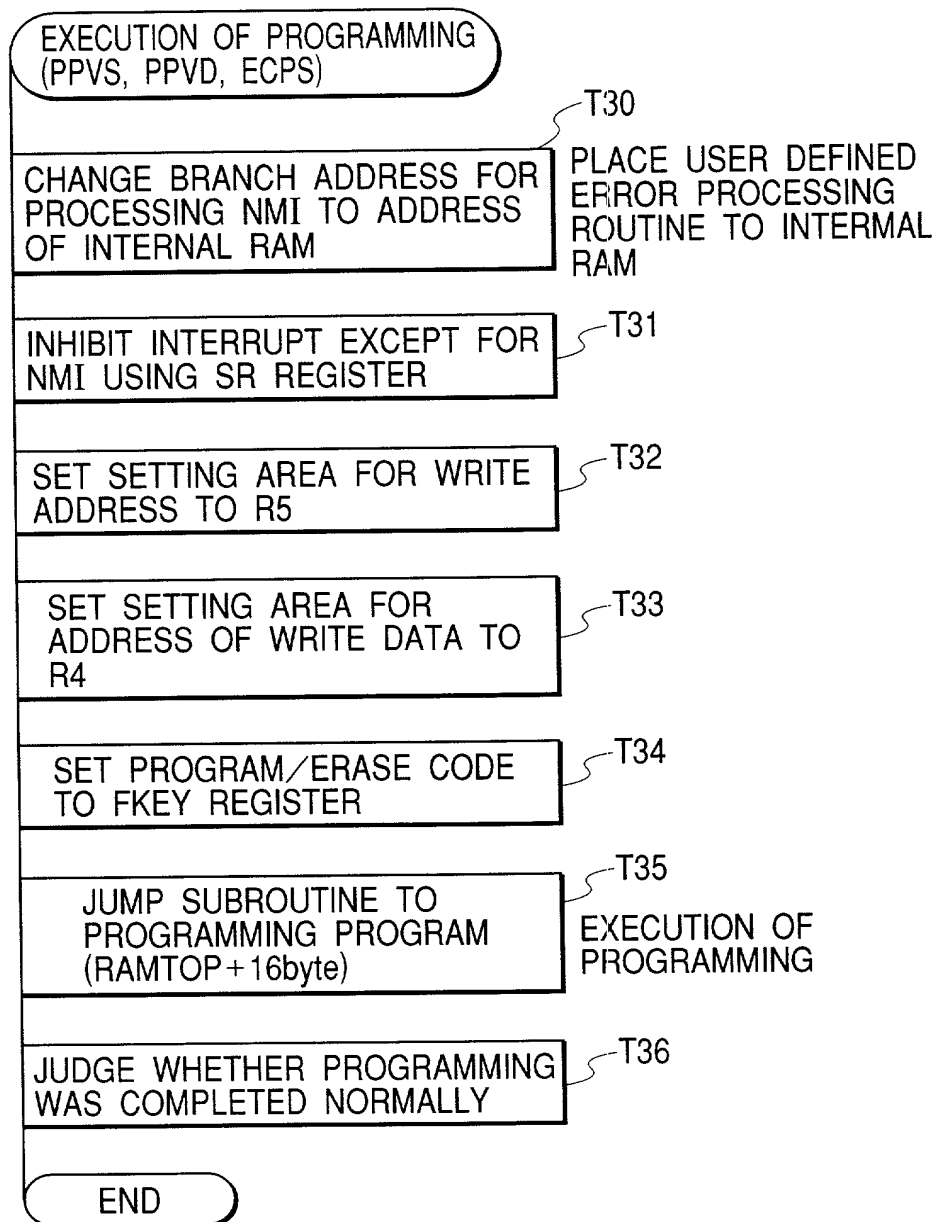


FIG. 18

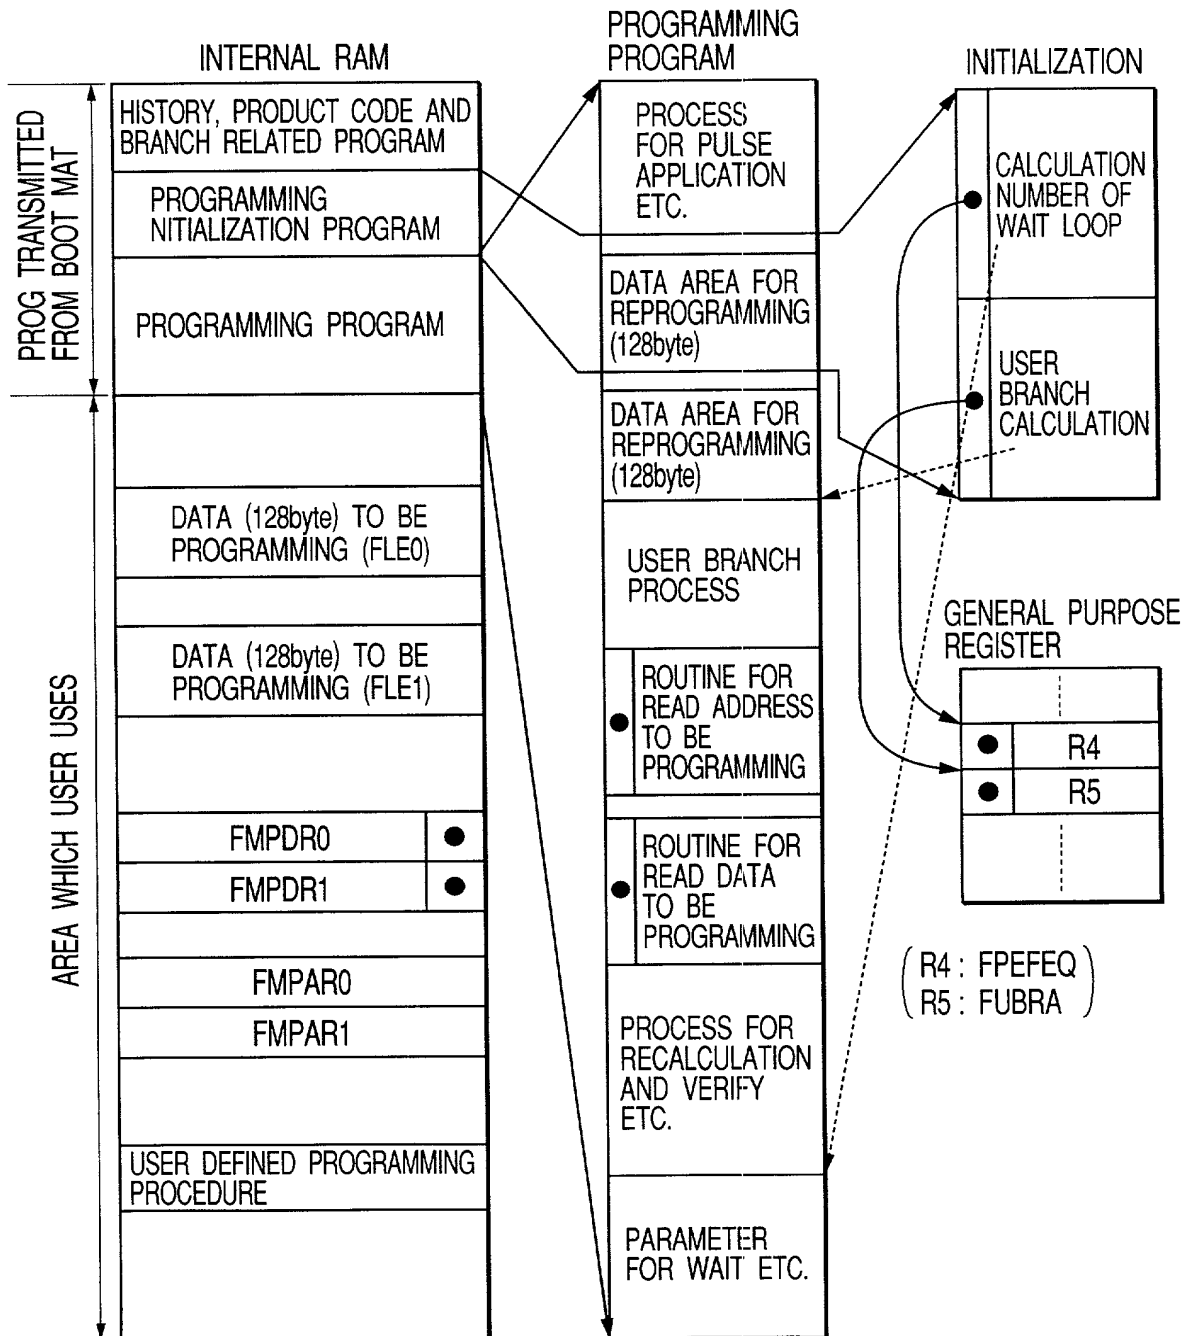


FIG. 19

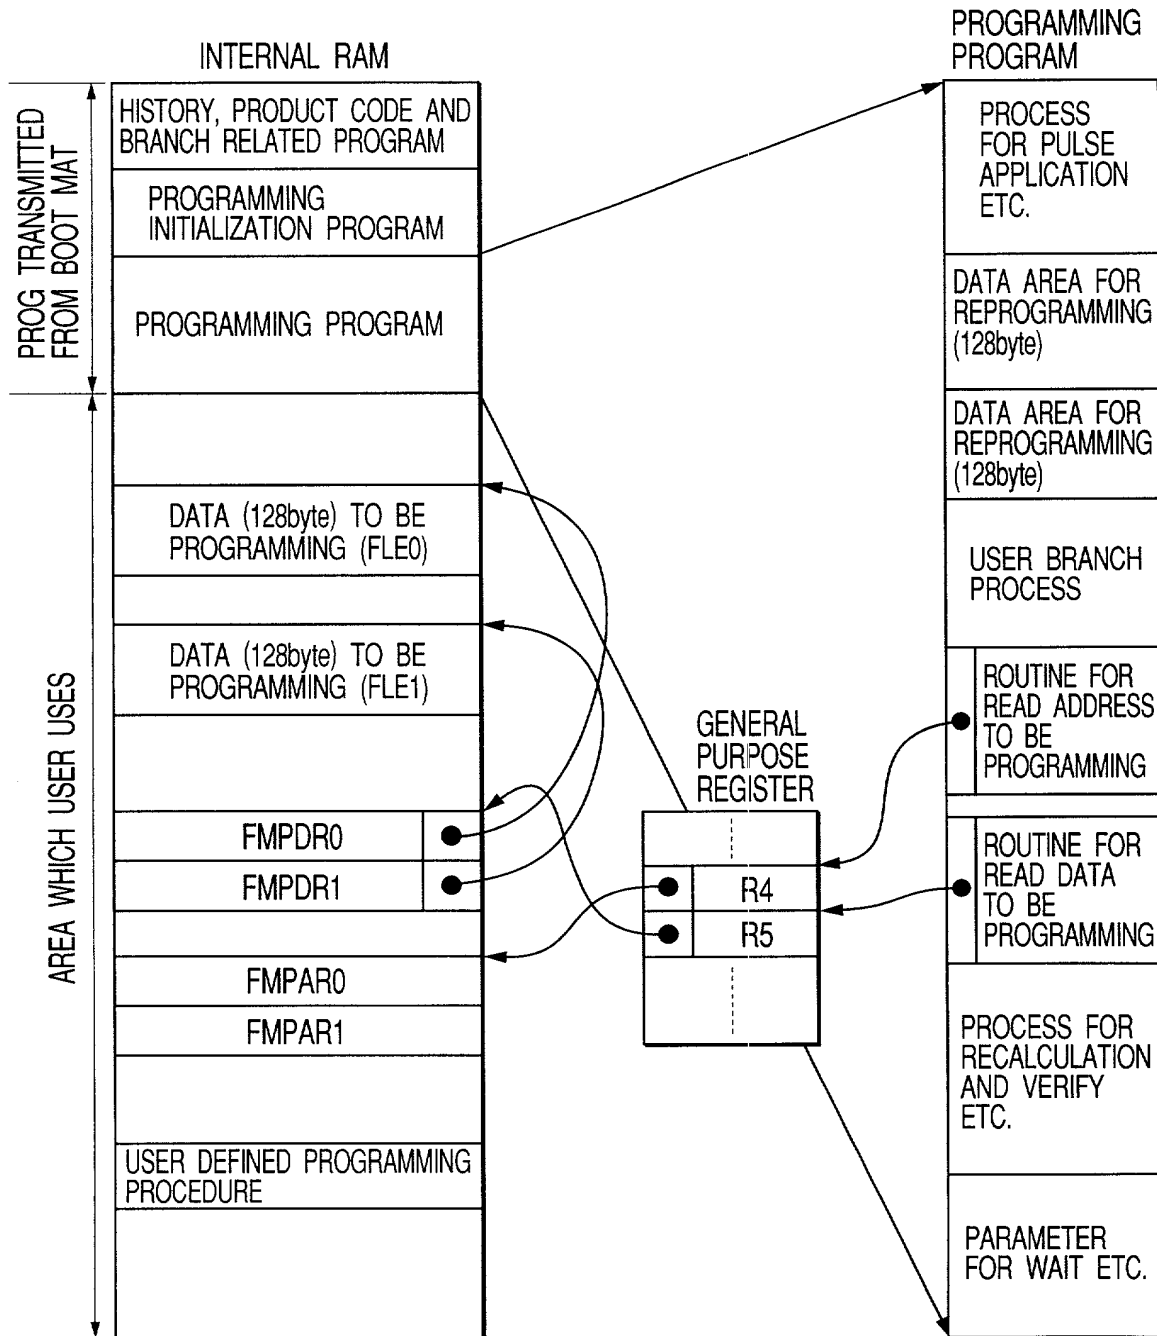


FIG. 20

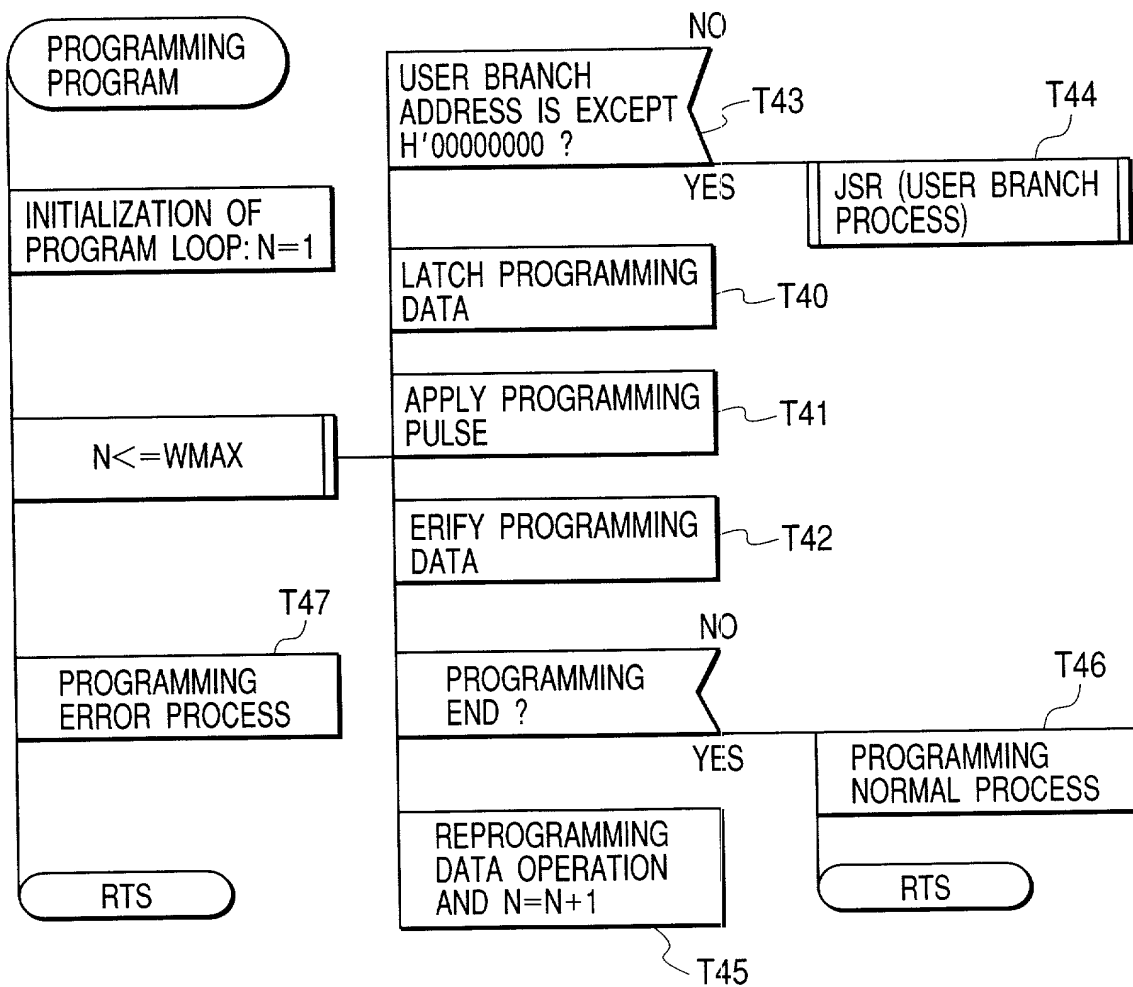


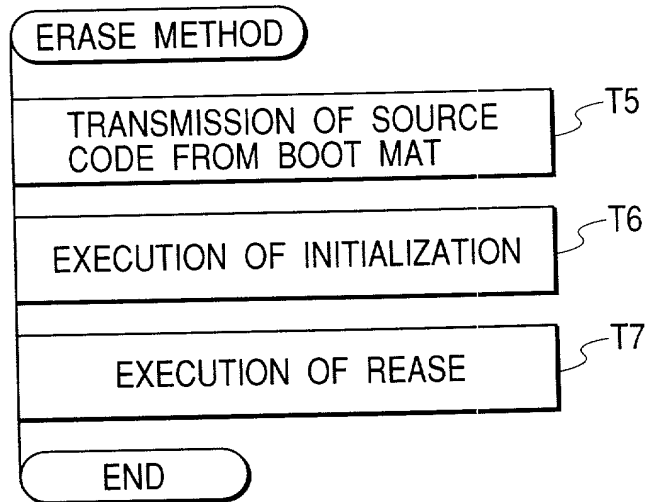
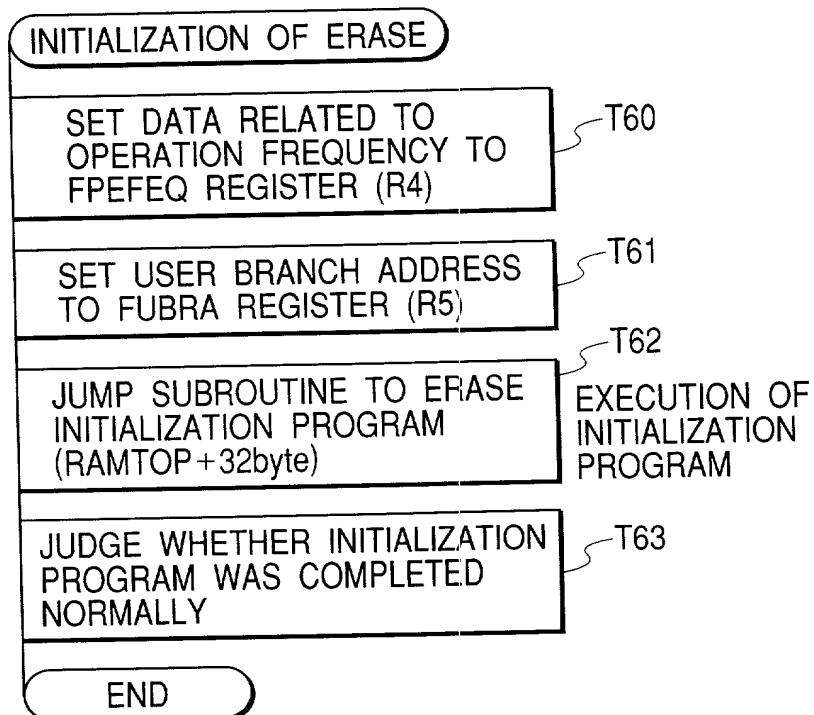
FIG. 21*FIG. 22*

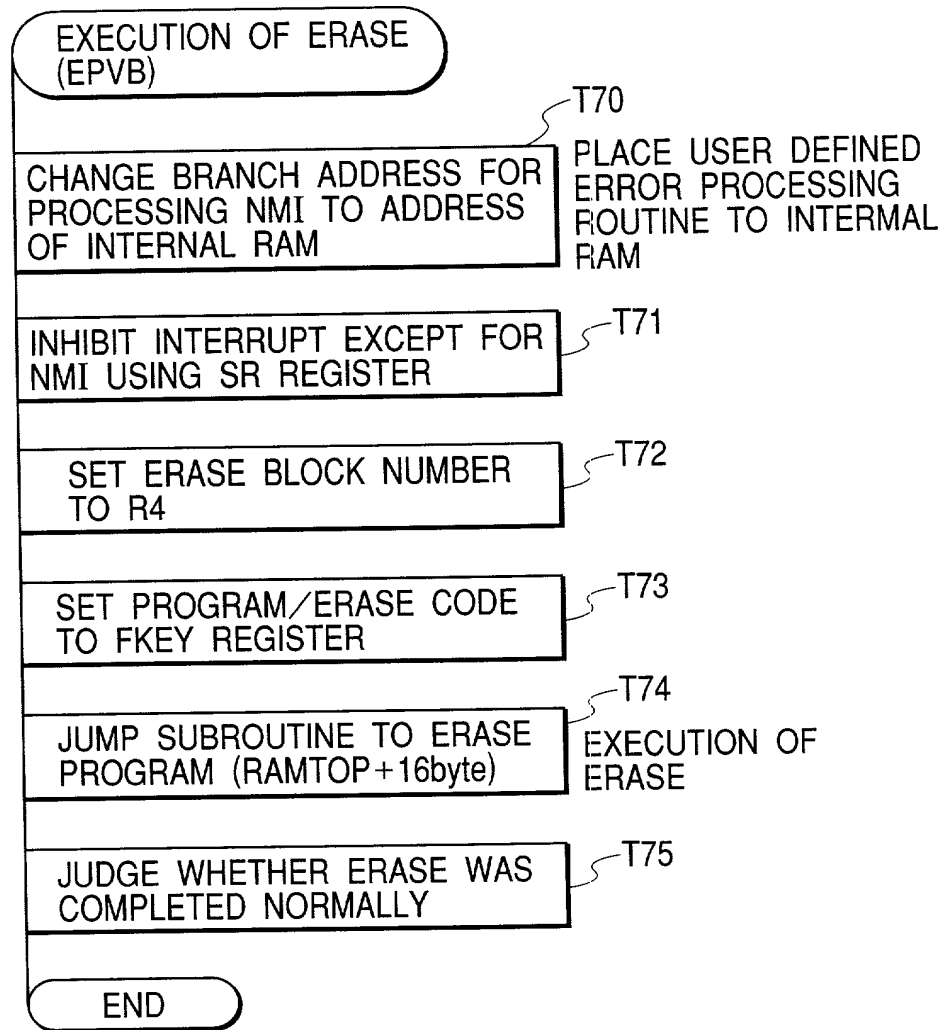
FIG. 23

FIG. 24

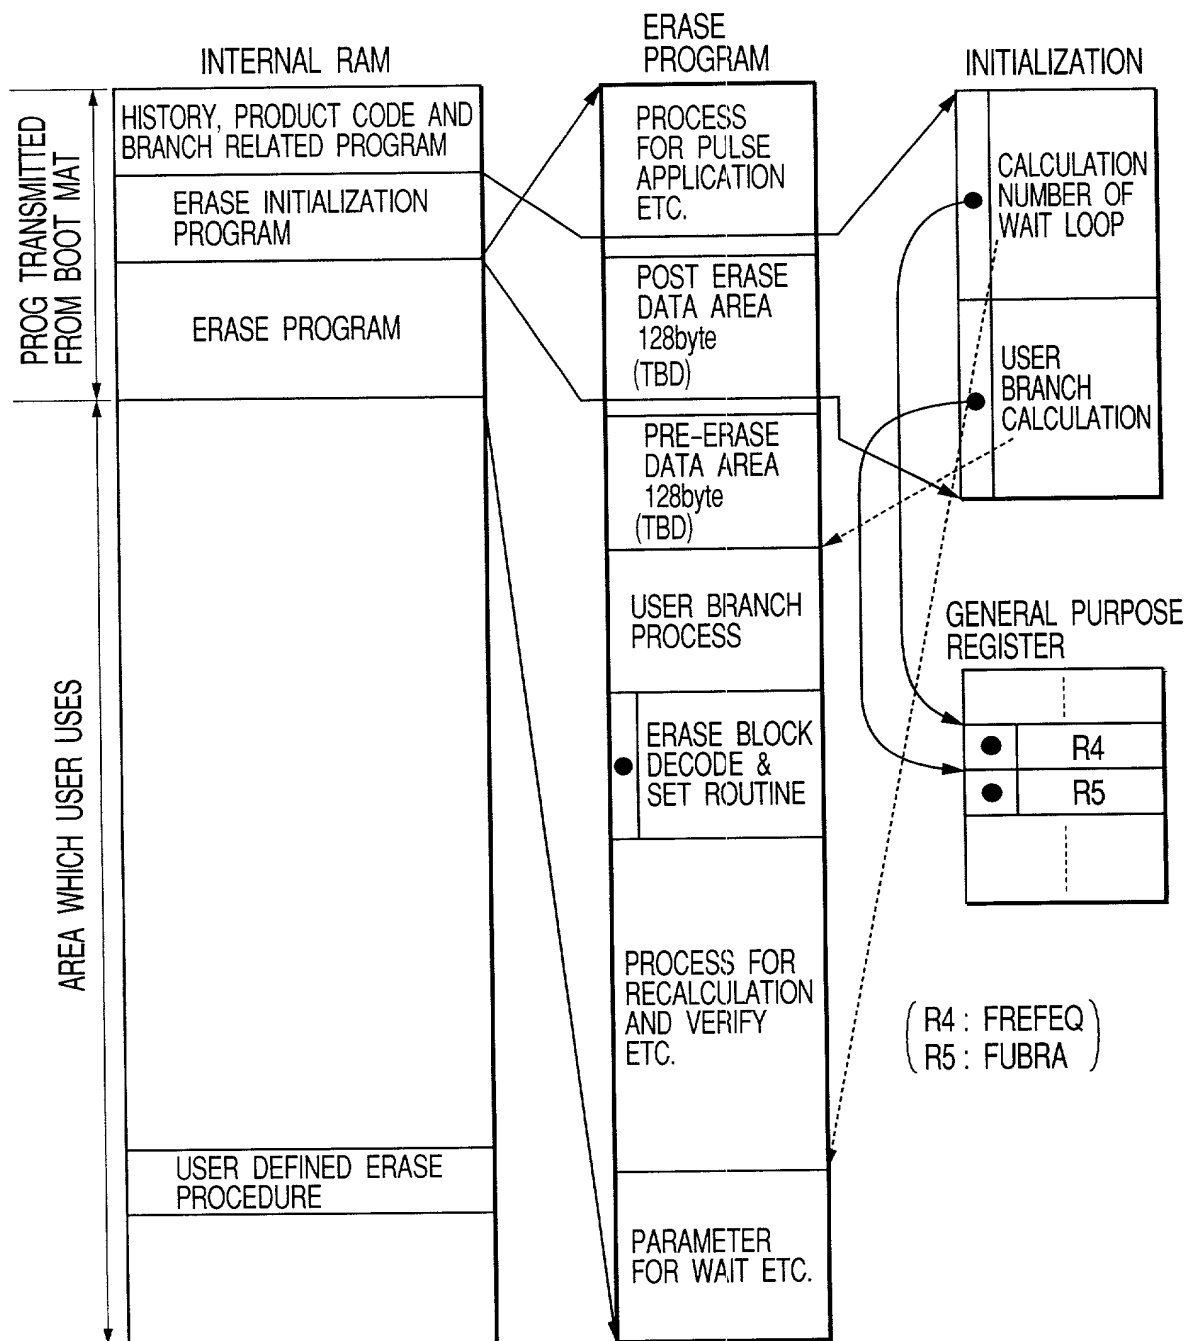


FIG. 25

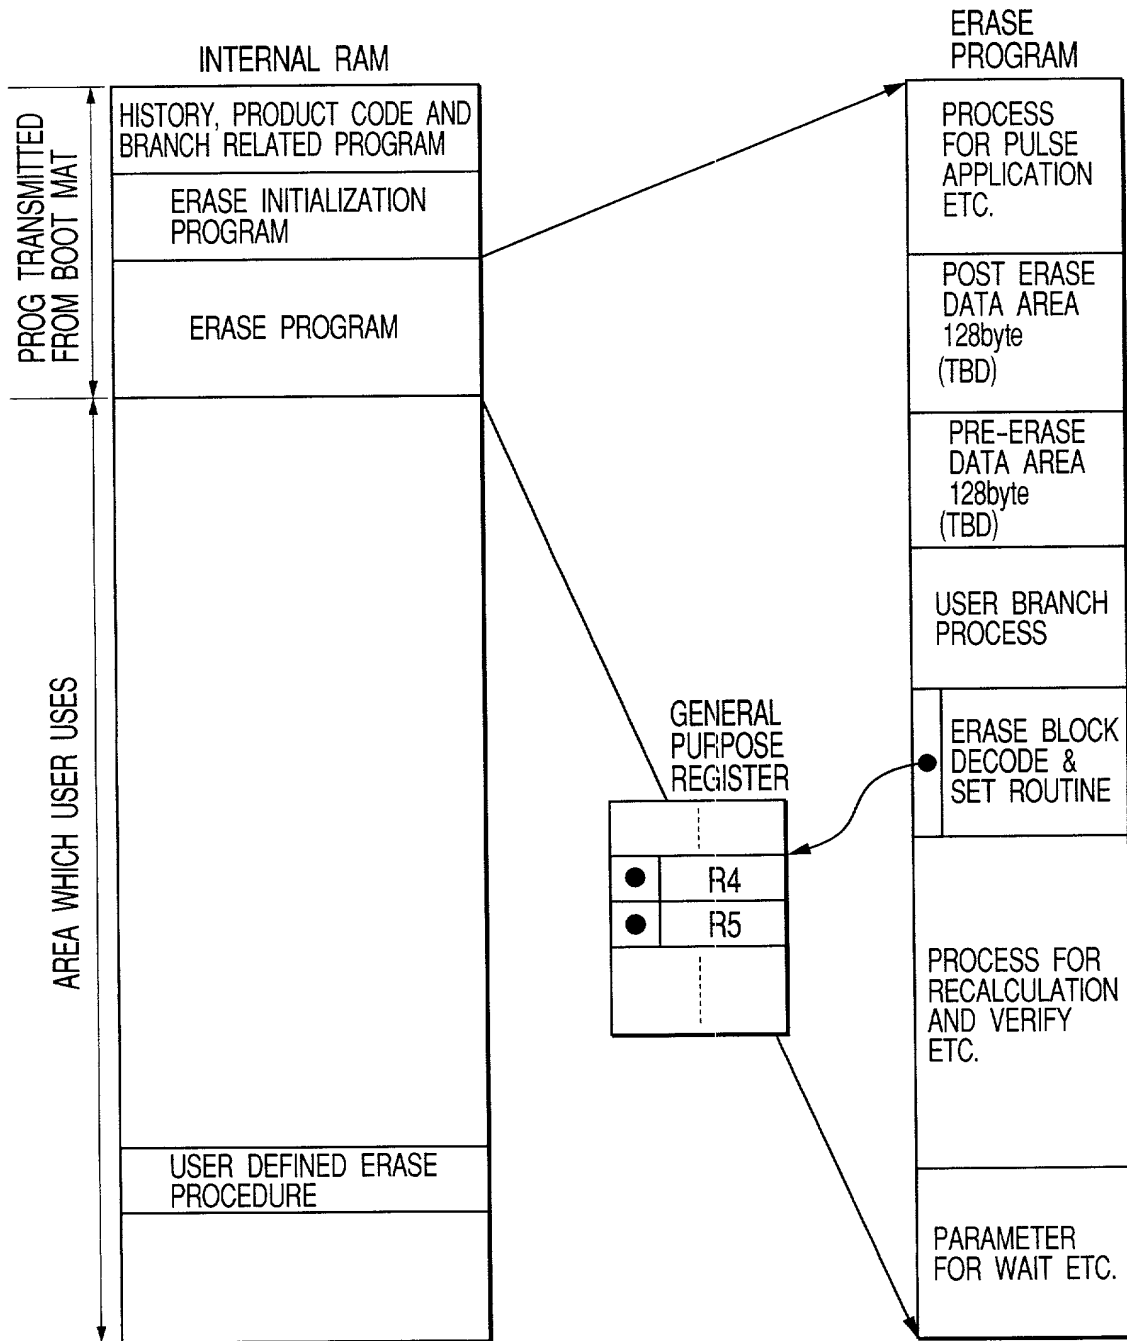


FIG. 26

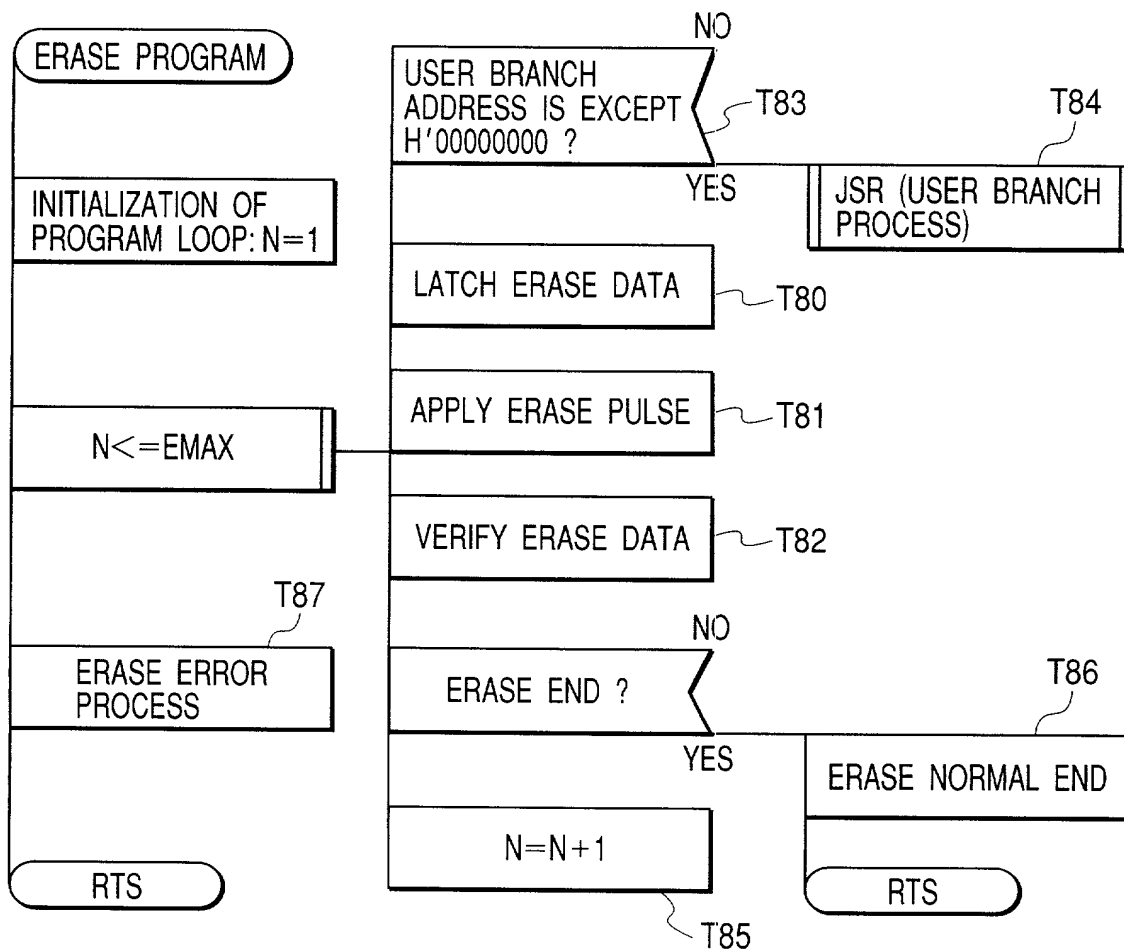


FIG. 27